


## How to Update Software on AutoFill


<p>Download the new Software to a USB. (USB should be formatted as FAT-32)</p>	
<p>Open the enclosure by turning the front bolt</p>	
<ol style="list-style-type: none"><li>1. Locate the USB port in the back of the controller</li><li>2. Insert the USB into the USB port</li></ol>	

## How To Update Software on AutoFill


1. Press the Calf Head button on the left menu
2. Make a note of what Software Rev you are on currently
3. Press the Login button and enter code 2000

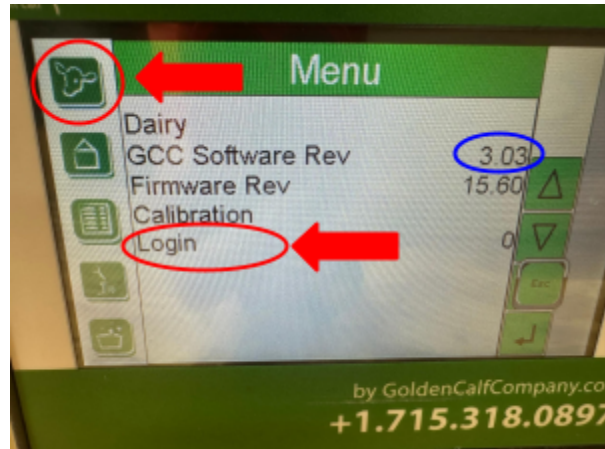

In the next menu, choose SW upgrade

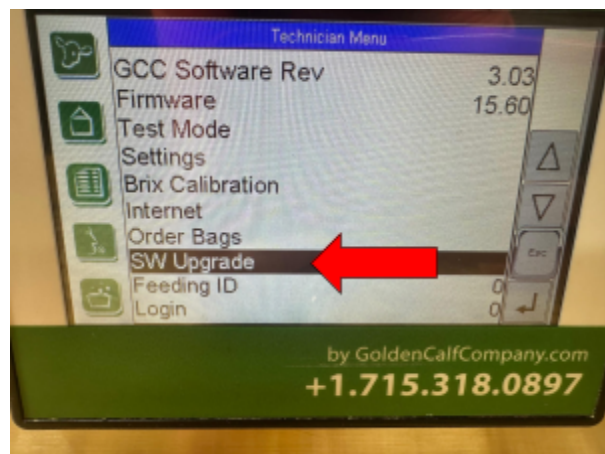


1. Confirm that the USB is firmly pushed into the USB port at the back of the controller.
2. Press the "Copy Update" button
3. Press "Select Update", from the SD card choose the file you just downloaded
4. Press "OK" when asked
5. The controller should then return to the home screen

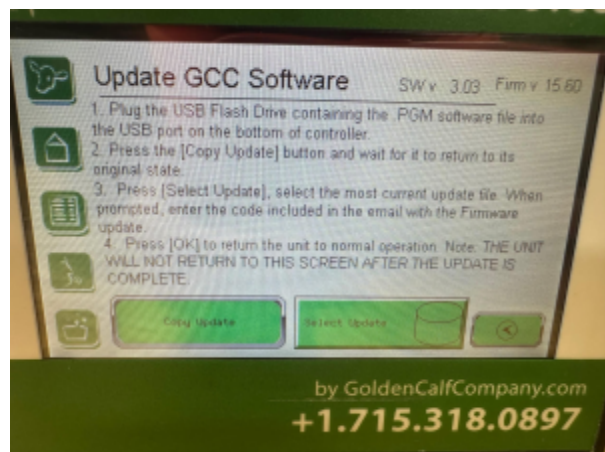

## Confirm New Software

To confirm that the software update took place, press the calf head button and check the GCC Software Rev.

Then Login with 2000 code

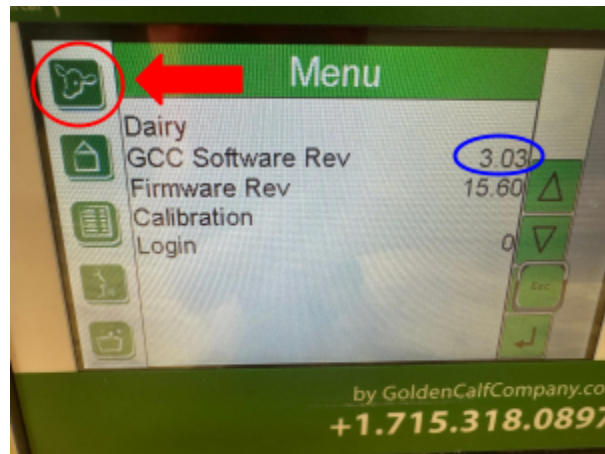


## Check the Open Valve parameter.

Once Logged in, go to Settings



# How To Update Software on AutoFill

Choose Valve Close Time

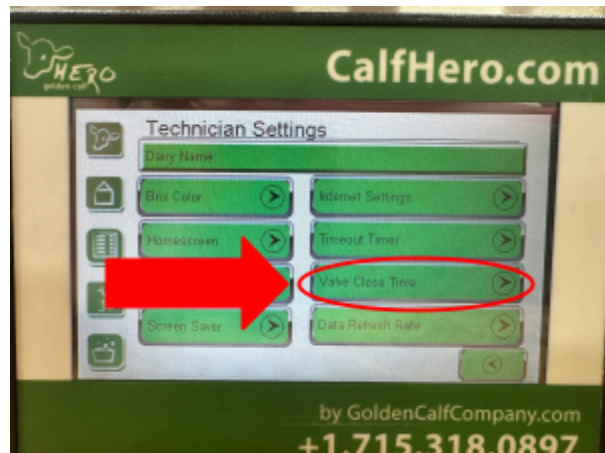

Make sure that the value is between 3-5, the higher the number the longer the valve is forced to close.

